

How to Activate & Install Your LOCI Asset Tracker

Asset Tracker Battery Installation Guide

Before you begin, you will need to order your LOCI Asset Trackers by heading to **Settings > Device Management > Order a Battery-Powered Argus Asset Tracker** on the Argus platform.

When you receive the devices, you will need the following tools:

- A LOCI Asset Tracker
- A small philips head screwdriver
- A small plastic, wooden, rubber, or non-metal prying tool (optional)



Step 1

Unscrew the six screws on the back cover of your LOCI Asset Tracker device.



Step 2

Remove the batteries with a non-metal prying tool (if you have one) or your fingers. Keep them out for 10 seconds and put them back in,

A red light will flash on the back of the green circuit board for a few minutes to signify that the batteries are working and that the device is connecting to the network.

Please Note: Asset Trackers ping 3x per day with 8-hour intervals e.g. if you input the batteries at 9:04am they will ping at 5:04pm, 1:04am and 9:04am.



Step 3

Replace the back cover and screw it on with the six screws you removed in step 1.

Step 4

Now that the device is activated, it's time to install.

Asset Trackers can be mounted to an asset using cable ties, industrial adhesives or super-strength double-sided tape. When choosing a mounting point, you have two competing goals:

- To minimise the chances of the device being accidentally crushed, dislodged or discovered.
- To maximise the GPS network signal.

Choose a location that will not result in elevated temperatures. For instance, mounting the Asset Tracker in direct sunlight on the dash of the unventilated cabin may overheat the batteries, leading to an abnormally short service life.

Please Note: Before installation, please take note of what the Vehicle ID (VID) number goes on which asset for identification on the Argus platform.



Need Help?

Log a Support Ticket
support@argustracking.com